

**Dishwasher - Product Fiche**  
**According to the Commission Delegated Regulation (EU) Nr 1059/2010**

|  |  |
|--|--|
| Trade mark   | <b>DE DIETRICH</b>   |
| Commercial code  | <b>DVH1444J</b>  |
| Number of place settings   | <b>14</b>  |
| Energy efficiency class  | <b>A++</b>   |
| Energy consumption   | <b>266kWh/year</b><br><i>Based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes.</i><br><i>Actual energy consumption will depend on how the appliance is used.</i> |
| Energy consumption of the standard cleaning cycle ( <b>ECO Programme ECO</b> )   | <b>0,93kWh</b>   |
| Power consumption in off-mode  | <b>0.45 W</b>  |
| Power consumption in left-on mode  | <b>0.49 W</b>  |
| Water consumption  | <b>2800liters/year</b><br><i>Based on 280 standard cleaning cycles.</i><br><i>Actual water consumption will depend on how the appliance is used.</i>   |
| Drying efficiency class  | <b>A</b><br><i>On a scale from G (least efficient) to A (most efficient)</i>   |
| <i>The standard programme "ECO" is the standard cleaning cycle to which the information in the label and the fiche relates.</i><br><i>This programme is the most efficient in terms of combined energy and water consumption to clean normally soiled tableware.</i> |  |
| Programme time for the standard cleaning cycle ( <b>ECO Programme</b> )  | <b>195min</b>  |
| Duration of the left-on mode   | <b>30min</b>   |
| Noise level  | <b>44dB(A)</b>   |
| Type of installation   | <b>Full-integrated</b>   |